




Nadogradnja Windows Phone 7 operativnog sustava

Nadogradnja Windows Phone operativnog sustava pomoću Zune aplikacije

Pokretanje aplikacije


- Ako želimo početi proces nadogradnje potrebno je spremiti Zune aplikaciju na računalo i instalirati je.
- Mobilni uređaj potrebno je povezati micro USB kablom na Vaše računalo.
- Početni zaslon Zune aplikacije

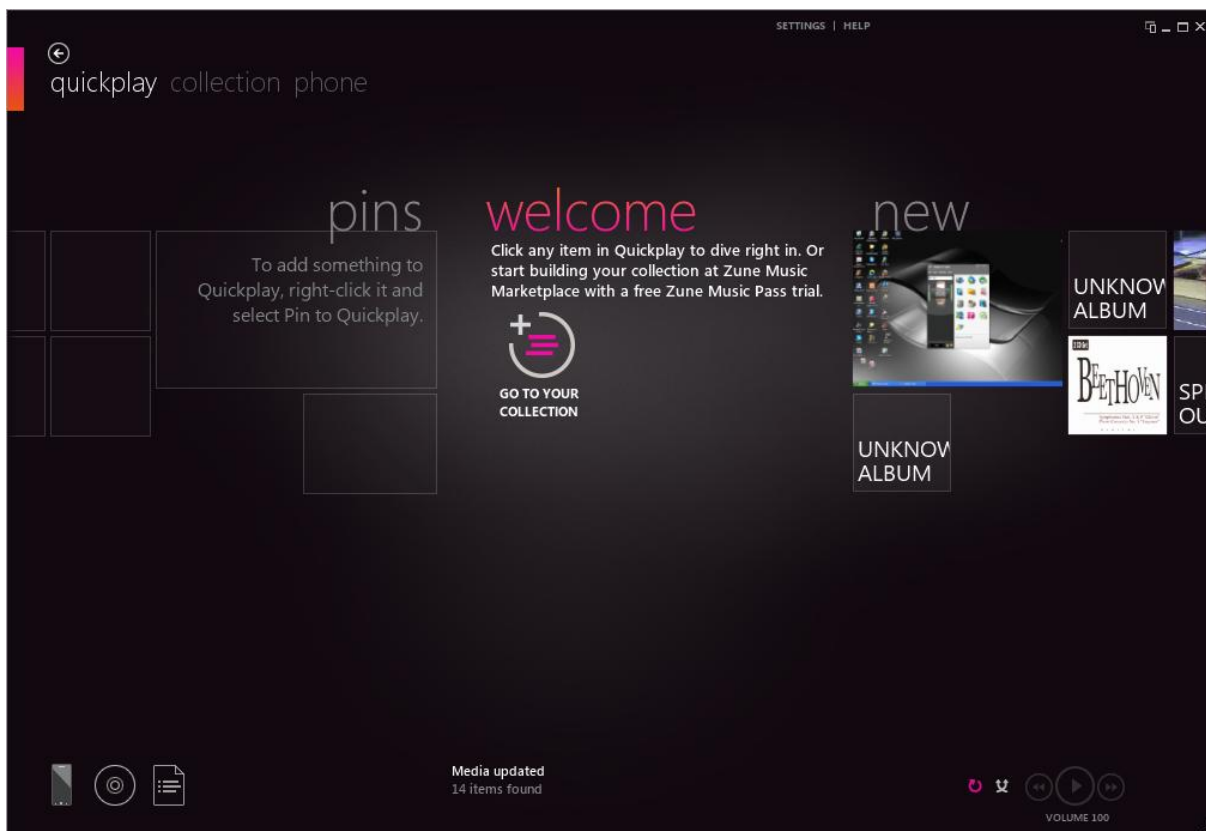



Prvo povezivanje uređaja


- Kod prvog pokretanja Zune aplikacije s priključenim mobilnim uređajem pojavit će se prikazani prozor koji će Vas provesti kroz nekoliko koraka
- Odaberite „Next“

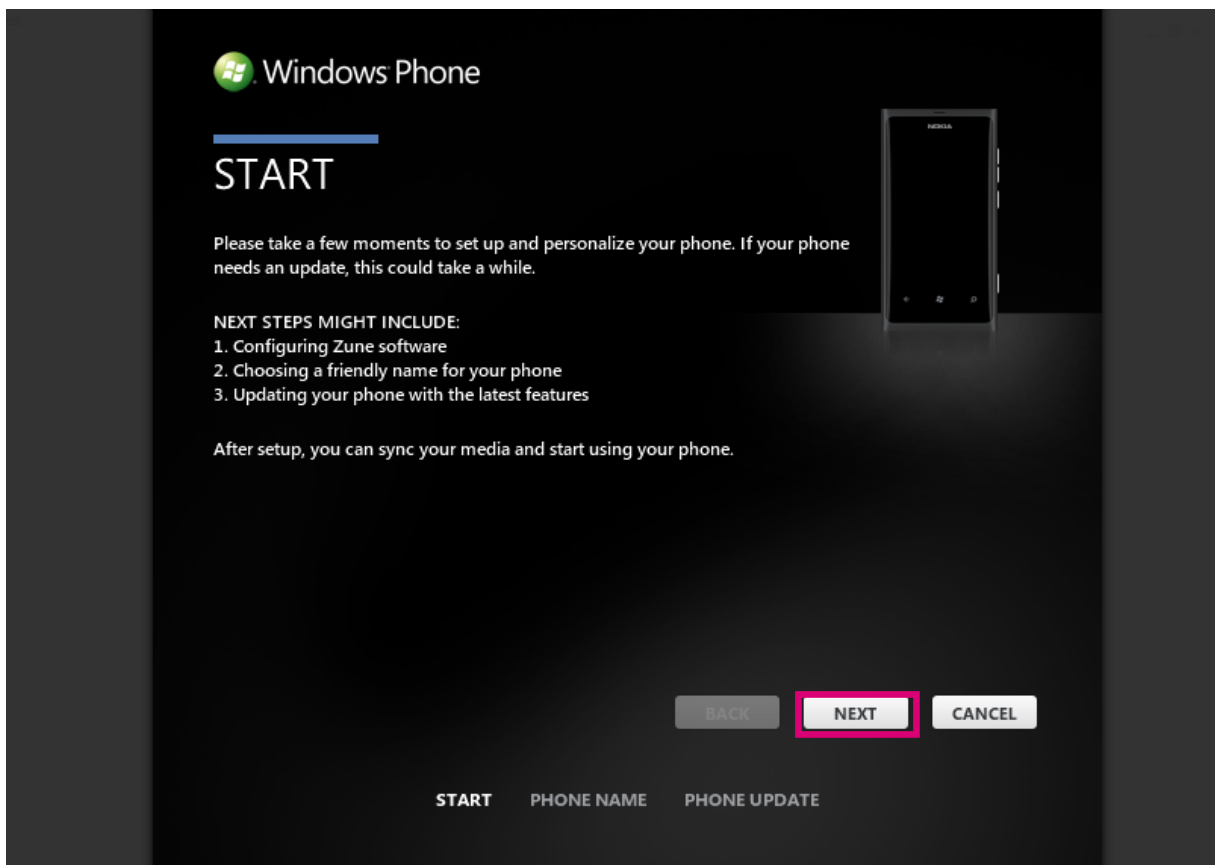



Povezivanje mobilnog uređaja


- Odaberite naziv svog mobilnog uređaja (u našem slučaju Nokia Lumia 800)
- Odaberite „Next“

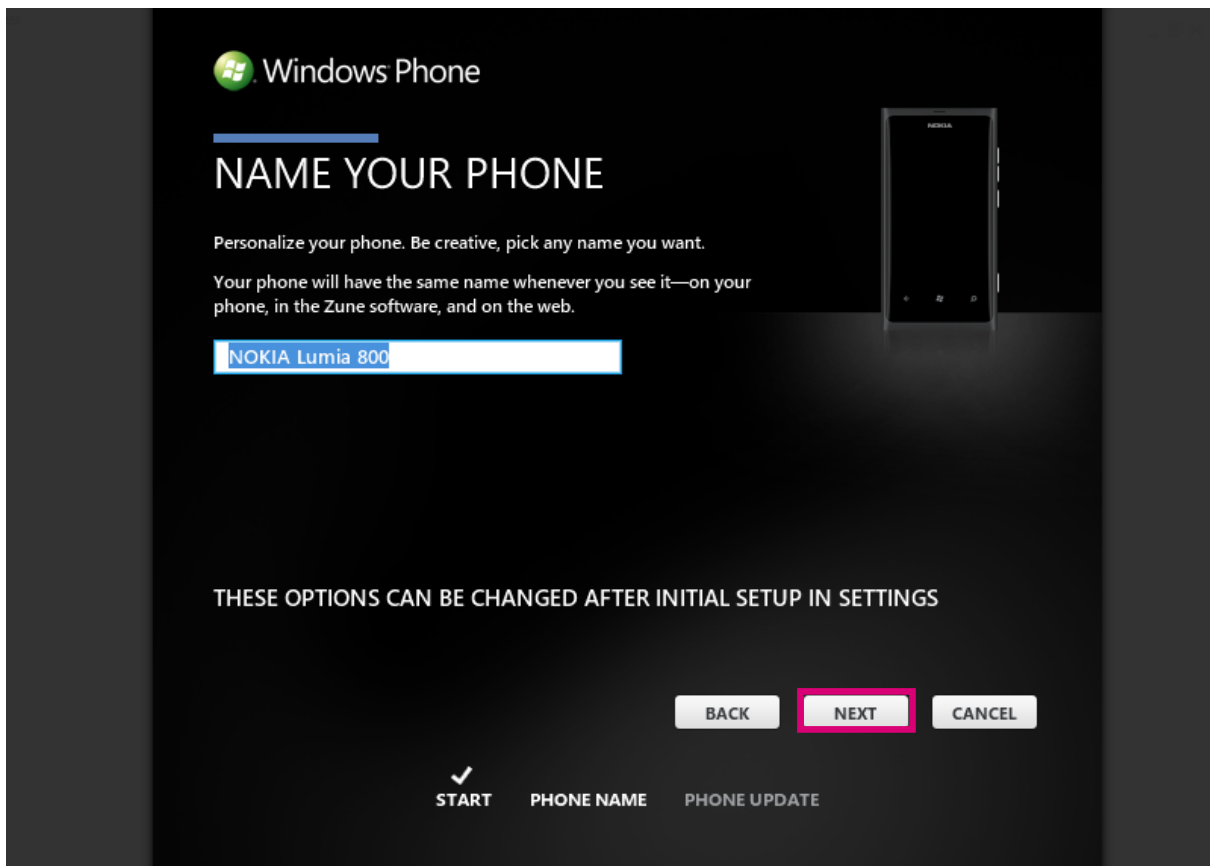



Nadogradnja uređaja


- U zadnjem koraku aplikacija će automatski tražiti „update” za Vaš mobilni uređaj

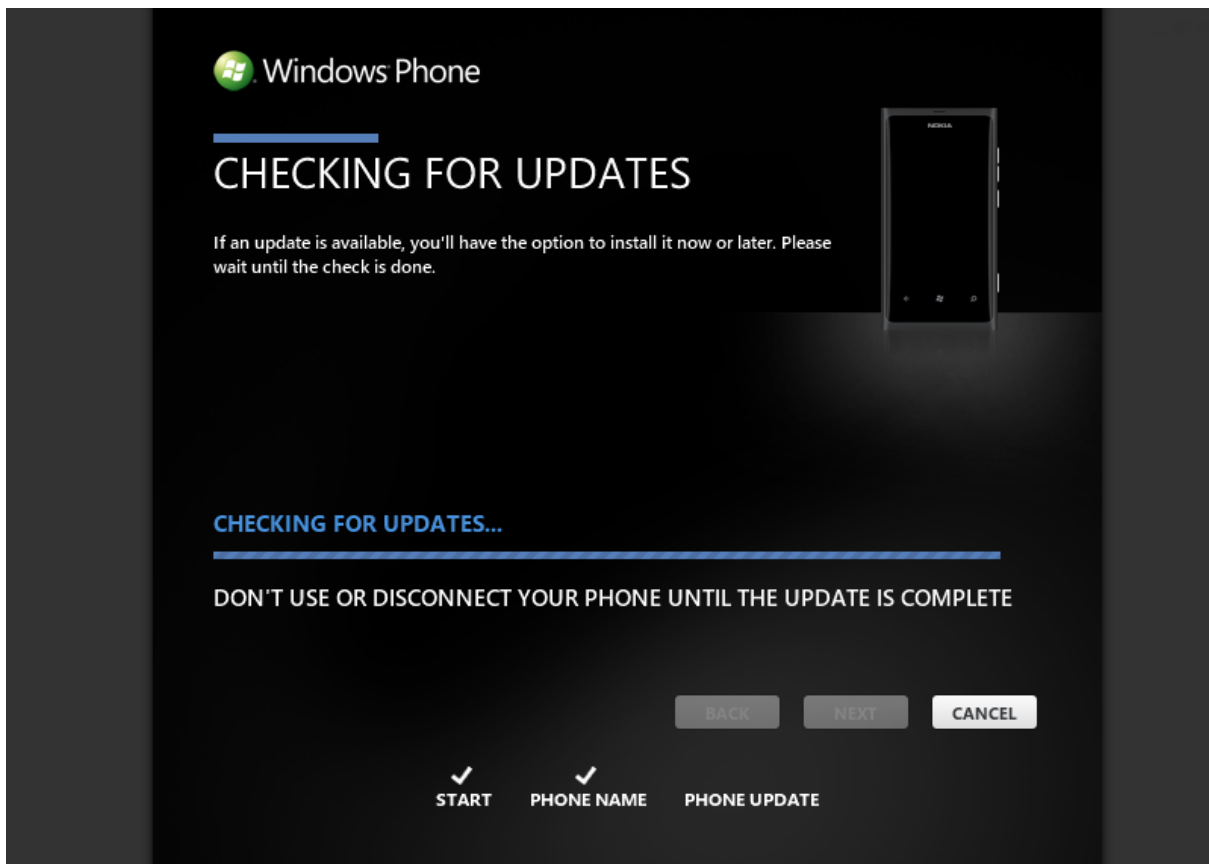



Nadogradnja uređaja

- Ukoliko želite naknadno nadograditi Vaš mobilni uređaj slijedite daljne upute
- Na početnom zaslonu odaberite pri vrhu „Settings“

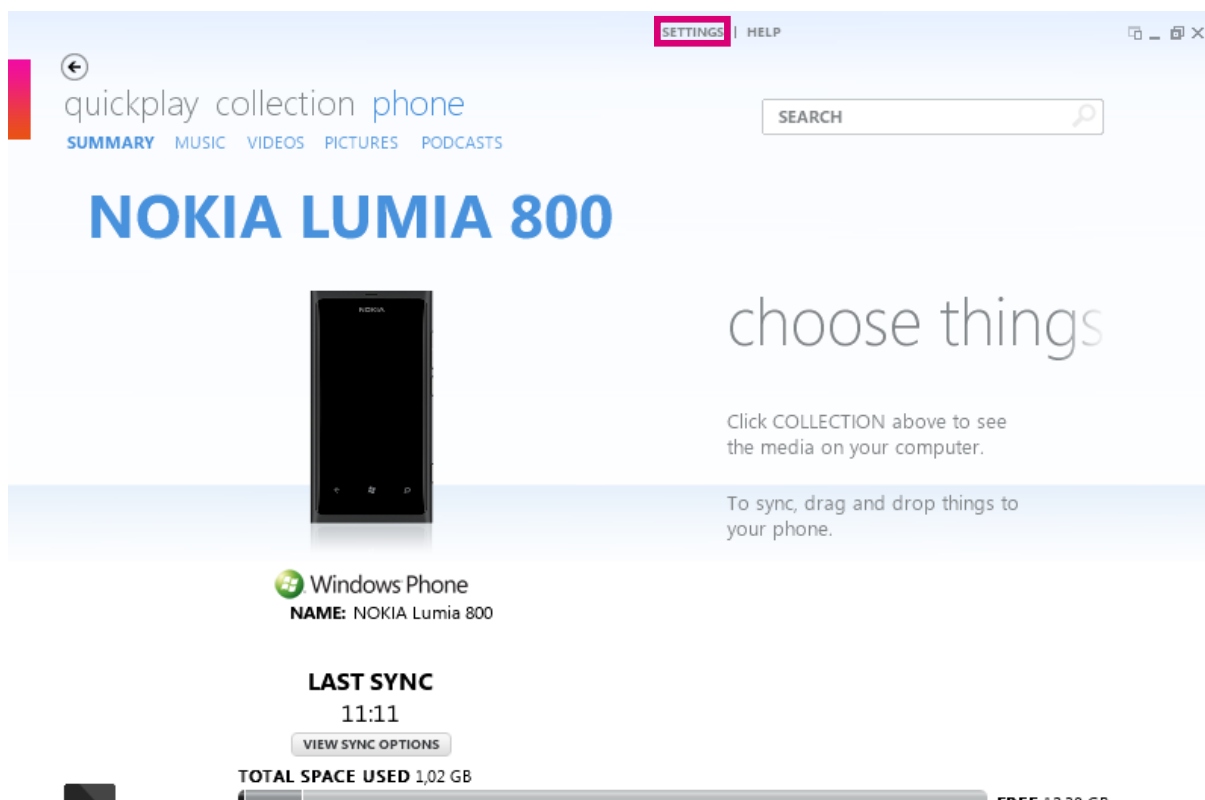



Nadogradnja uređaja

- Odaberite „PHONE“

The screenshot shows the Windows Phone settings application. At the top, there is a 'settings' header with a 'PHONE' tab selected. A left-hand menu lists various settings categories, with 'SYNC OPTIONS' expanded. The main content area displays instructions for syncing items and provides radio button options for 'MUSIC', 'VIDEOS', and 'PICTURES'. Each category has three options: 'All', 'Items I choose', and 'Manual'. The 'Items I choose' option is selected for all three categories. At the bottom, there are 'OK' and 'CANCEL' buttons.

settings
SOFTWARE PHONE

▶ SYNC OPTIONS
SYNC GROUPS
NAME YOUR PHONE
DO MORE ON THE WEB
UPDATE
WIRELESS SYNC
PICTURES & VIDEOS
CONVERSION SETTINGS
RESERVED SPACE
ERROR REPORTING

NOKIA Lumia 710

With "Items I choose", drag items in your collection to sync them with your device.

Any changes you make to these items will be mirrored on your device. When you delete something, for instance, it will be removed from your device as well as your computer.

To keep things on your device that you've deleted from your computer, choose manual sync.

[Learn more about sync options](#)


MUSIC	VIDEOS	PICTURES
<input type="radio"/> All	<input type="radio"/> All	<input type="radio"/> All
<input checked="" type="radio"/> Items I choose	<input checked="" type="radio"/> Items I choose	<input type="radio"/> Items I choose
<input type="radio"/> Manual	<input type="radio"/> Manual	<input checked="" type="radio"/> Manual

OK CANCEL



Nadogradnja uređaja

- U popisu odaberite „update“
- Aplikacija će provjeriti ima li nadogradnje za Vaš uređaj

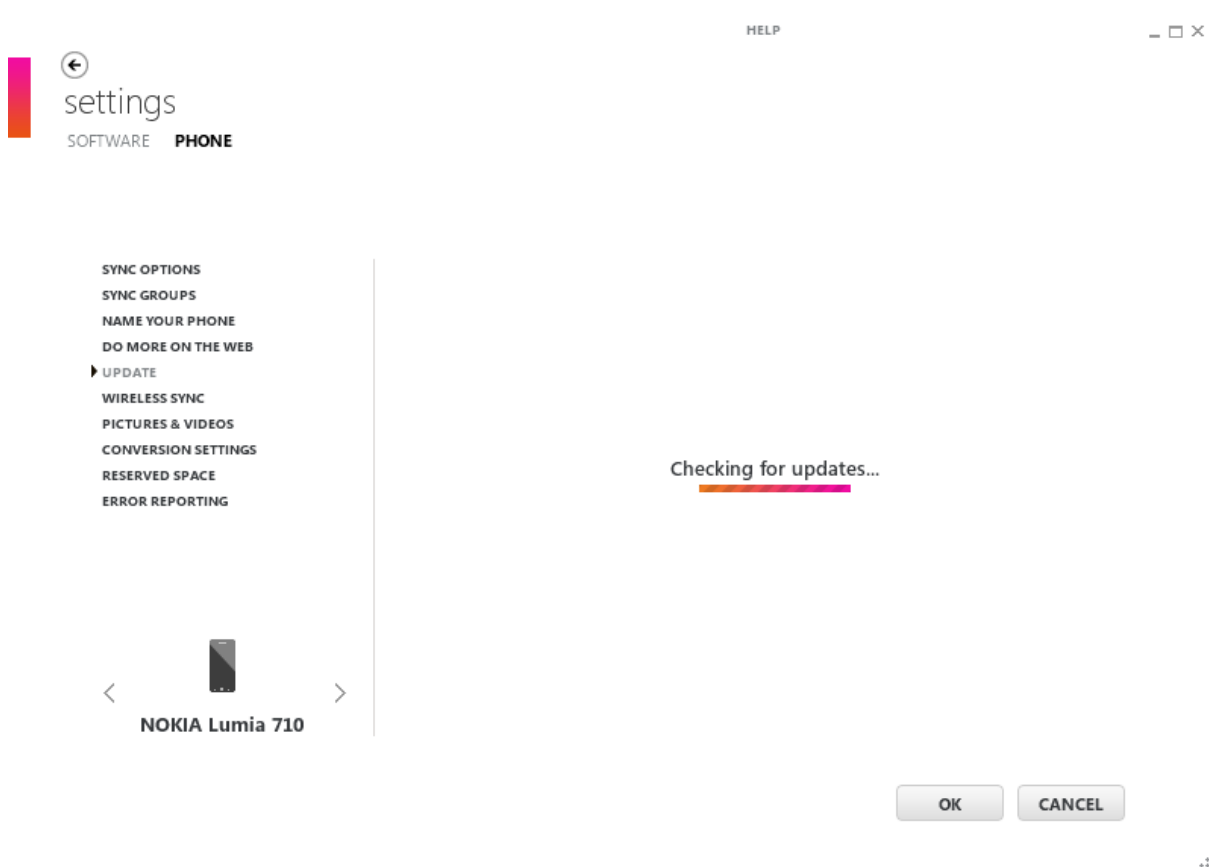



Nadogradnja uređaja

- Ukoliko nema nadogradnje prikazat će se sljedeći prozor

